

AutoFinish Lid Adjustment

1/30/26

1. Check the left slot side of the lid to ensure the lid sits just above the top of the liner on the right side when seated all the way to the left.



- a. If necessary, adjust the left slot holder to until the lid seats as shown in the image.
 - i. Adjust by loosening the 2 bolts using a 7/16" wrench, shifting the slot and retightening.
2. Once the left side is seating correctly, check the tightness of each clamp individually to ensure there is an appropriate amount of resistance. ***If the clamp is too tight it can pinch the liner causing it to leak***

- a. Adjusting the clamps: ***Make sure this is done one at a time beginning with the clamp directly across from the left slot side. to ensure balance of pressure***
 - i. Use a 7mm open end wrench to loosen the 2 nuts on the upper part of the U-bolt by turning it counterclockwise enough to allow space for some adjustment.
 - ii. To tighten the U-bolt, turn the bottom locknuts clockwise equally on each side to balance the adjustment until the clamp is applying the appropriate amount of pressure.
 - iii. Once adjusted, tighten the top nut to ensure the U-bolt will not loosen with usage.
 - iv. Repeat these steps for the back clamp making sure the first clamp is not engaged to ensure a balance of pressure on both clamps.

Please note: The latches are stainless steel so corrosion is not an issue, however some of the soap could have sprayed onto the latch. It is advised to wipe these with water and a clean cloth after each cycle to keep them operating properly.